



Quick start F-SCANT 2.0


Additional information can be enabled / disabled from menu "Help" / "See separate info window".

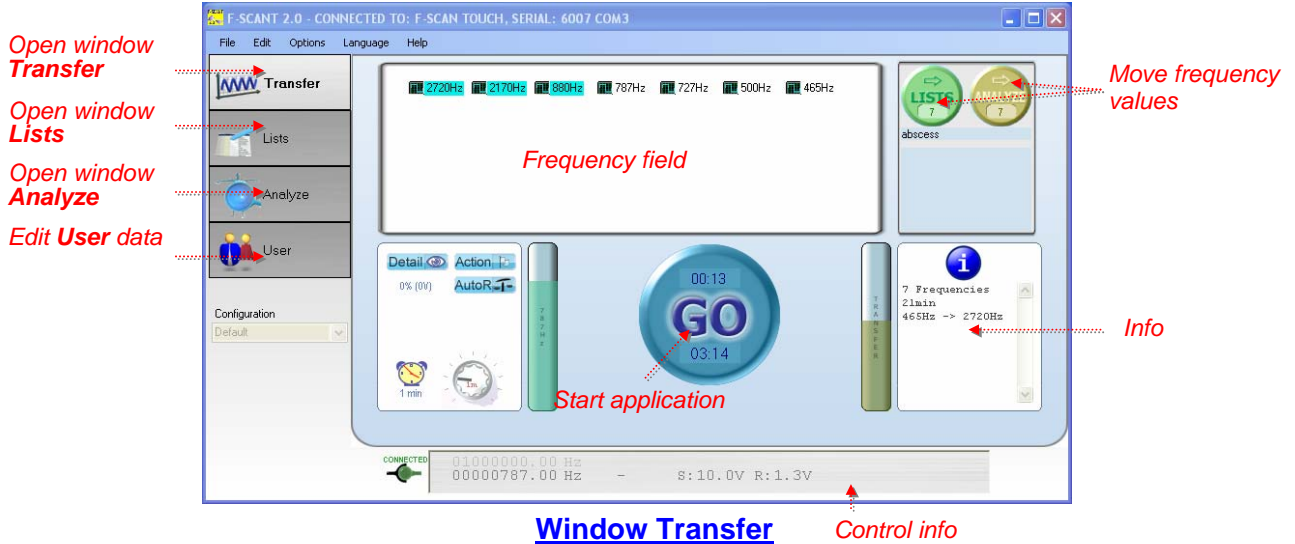


Window Transfer

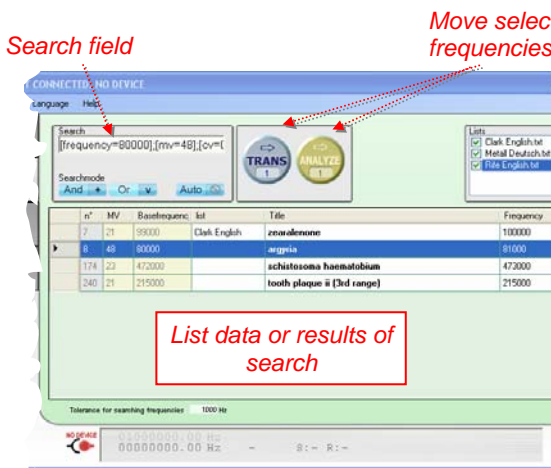

Window Lists

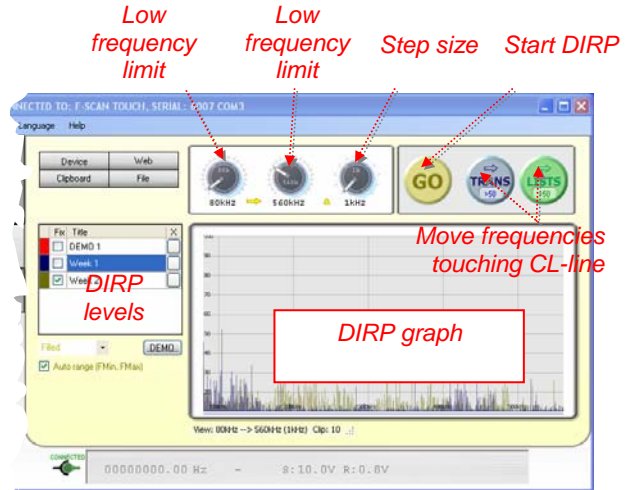

Window Analyze

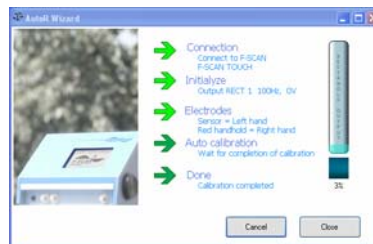

AutoR Calibration